If the actuator is marked with a danger warning do NOT attempt to cut the actuator open.



Do **NOT** attempt to disassemble the actuator due to spring under load danger.




Do **NOT** attempt to cut the actuator open, due to spring under load danger.

AND

SPRING UNDER LOAD
DO NOT ATTEMPT TO CUT ACTUATOR OPEN
REFER TO SERVICE BULLETIN

Do **NOT** attempt to cut the actuator open, due to spring under load danger.

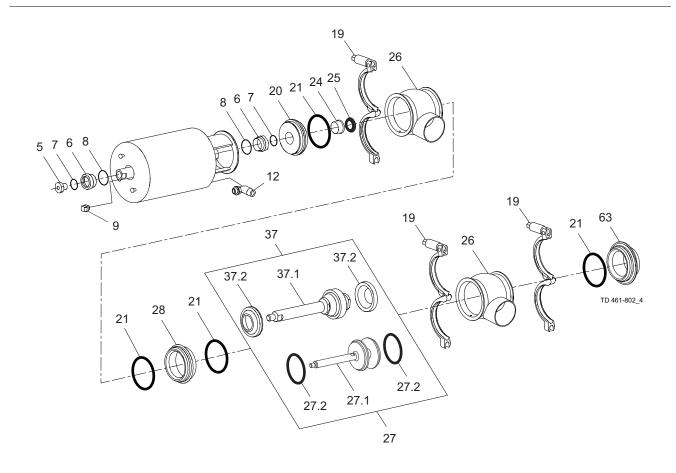

Intro 0709