If the actuator is marked with a danger warning do NOT attempt to cut the actuator open.



Do NOT attempt to disassemble the actuator due to spring under load danger. open, due to spring under load danger.




Do NOT attempt to cut the actuator

AND

**WARNING** SPRING UNDER LOAD DO NOT ATTEMPT TO CUT ACTUATOR OPEN REFER TO SERVICE BULLETIN

Do NOT attempt to cut the actuator open, due to spring under load danger.

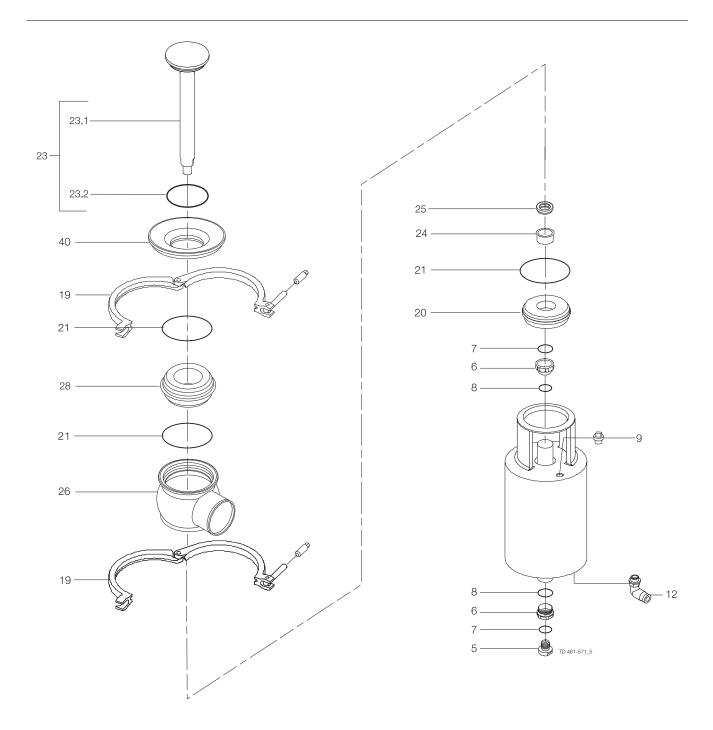

12